


# | strip | g|r|a|t|e | STANDARD

## STANDARD 750 INSTALLATION GUIDE

- 1 --- Installation to be in compliance with AS 3500.2.
- 2 --- Provide fall & waterproofing to the tile substrate
- 3 --- The top of the collection tray flange must be level with the top of the tile substrate.
- 4 --- For timber floor installation cut a hole 60 mm x 770 mm with a 125 mm dia. hole in the centre.
- 5 --- Fix the collection tray securely to the floor ensuring the top of the collection tray is level.
- 6 --- Fit the temporary plastic insert into the collection tray.
- 7 --- Apply the under tile waterproofing membrane over the collection tray flange.

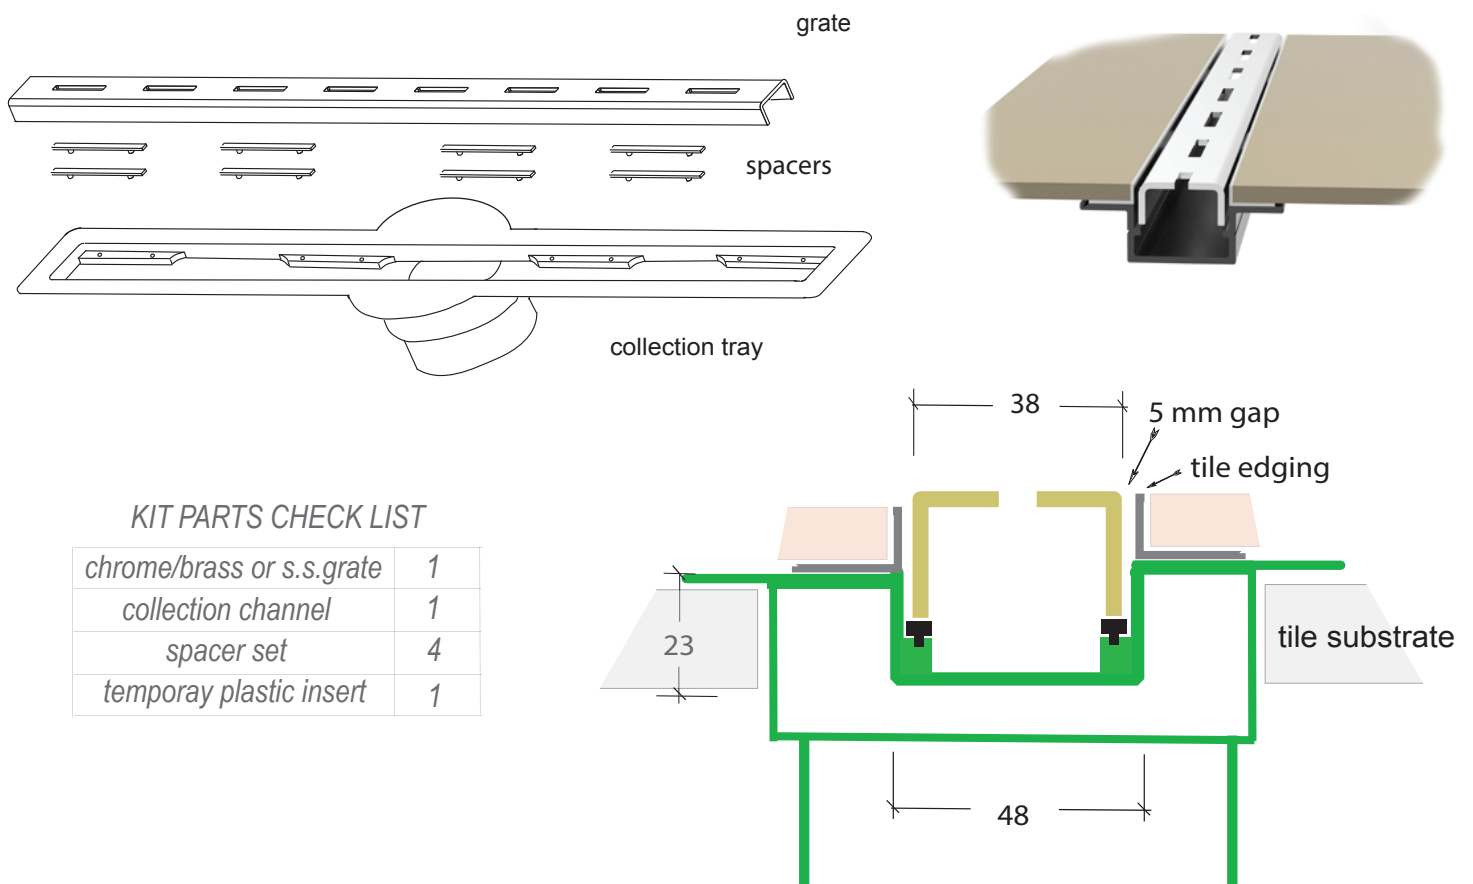

### TILING

- 1 --- Cut the tile edging to length allowing for a 5 mm gap all around between the grate and the tile edging.
- 2 --- Position the lengths of tile edging on the flange so that they do not overhang the collection tray.
- 3 --- **Position the tile edging so that there are equal gaps of 5 mm between the grate and the tile edging.**
- 4--- After tiling select the appropriate spacers to align the top of the grate with the top of the tiles.
- 5--- Glue the spacers into position to support the grate.